

21.5-inch Hand Sanitizer Display Manual




YXD22L-AD2 & AD3

1.Product Specification Sheet

Screen	Dimensions	21.5
	Resolution	1920*1080
	Touch	<input type="checkbox"/> Support <input type="checkbox"/> No Support
Motherboard	CPU	RK3288,Tetranuclear ARM Cortex-A17
	Memory	2G DDR3 (Optional match 4G)
	Built-in storage	Standard 8G internal storage (optional 8G / 16G / 32G)
	External Storage	Capable of attaching up to 64 gigabytes of TF card
	Display interface	Support LVDS, HDMI, EDP, maximum support 3840 * 2160 resolution
	Interface	RJ45
	TF	External Storage
	USB2.0	Transmit data
	OTG	Upgrade firmware
	Earphones	Audio amplifier output, 8 / 2 X 10W
	SIM	3G / 4G wireless module supporting mobile, Unicom and telecom all-access modules

Water level warning	10% (For a while)	<input type="checkbox"/> Support <input type="checkbox"/> No Support
	10%/50%/80% (Three segments)	<input type="checkbox"/> Support <input type="checkbox"/> No Support
Hand sanitizer	PUMP head	Gel, Drip, Foam
	Canteens	3000ML
	Effluent capacity	1.2ML
	External Storage	Capable of attaching up to 64 gigabytes of TF card
	Induction Distance	8MM
	Mode of supply	Infrared
Conventional parameter	Installation mode	Wall hanging, vertical
	Working Humidity	5%~90%
	Operating temperature	-20℃~50℃
	OTG	Upgrade firmware
	Power supply	220VAC 50HZ
	Packing list	Complete Machine * 1, Power Adapter * 1, Specification * 1, certificate of Conformity * 1

2.Dimensional Drawing

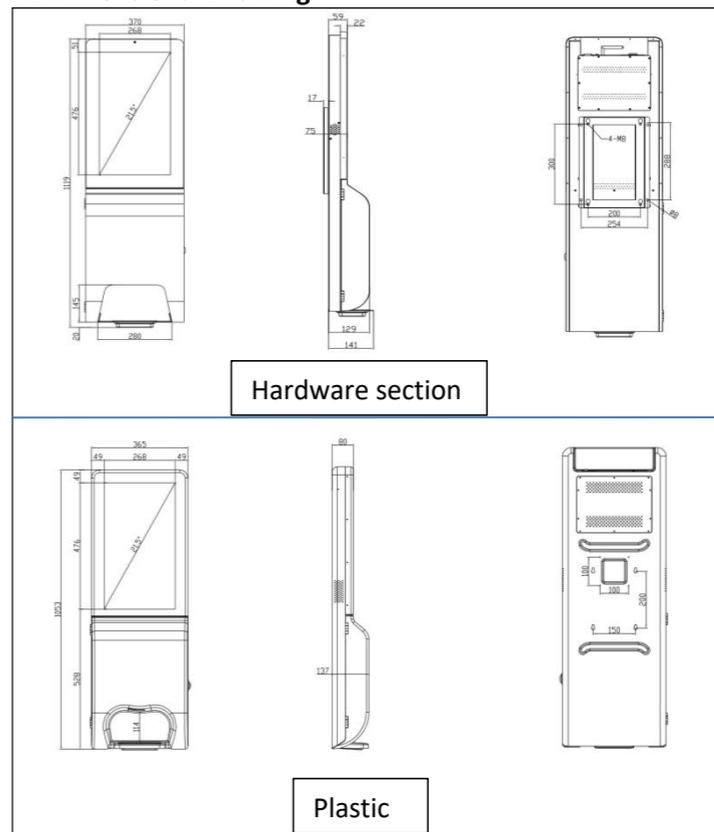

3.Interface Description




1	RJ45	GIGABIT cable port
2	USB 2.0	2.0 transport data interface
3	USB 3.0	3.0 transport data interface
4	TF	External Storage
5	SIM	Cell Phone Card Slot
6	UBOOT	Upgrade the KEYPAD
7	WIFI	Wireless Network
8	4G	4g (mobile / Unicom / Telecom) signal
9	Switch	On and off of the circuit
10	Switch	On and off of the circuit
11	Socket	Power cord access
12	DC head	Main board power interface

4. Installation Diagram


INSTALLATION INSTRUCTIONS

Note: LCD advertising machine for fragile products, do not touch the screen surface of a hard object, in the advertising machine is not hung on the wall, please put the advertising machine on the foam.

- ① Place the wall board horizontally on the wall On, and in need of a retaining screw Mark the silk places

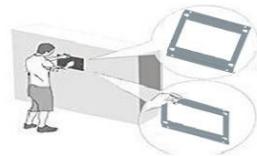

- ② Drill out with a 6-8mm bit 4 holes, location hole depth Degree of 50 mm

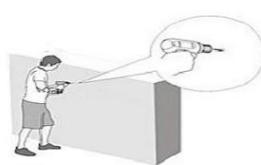

Perforation of solid lead-bearing wall	
Bit size	Drill hole depth
3/8" inch	3.00" inch
6 mm	70 mm

- ③ Place the screw into the hole with a countersunk head or screw The screw cap locks up the wall panel



- ④ Screw 4 M8*15 nuts on the back of the advertising machine to the position of 6MM. And then you hang it from the top down on the wall on the wall board, Change the machine by hand, Check whether it is firm



Wall hanging

- ⑤ Turn the key to the right to open the machine door



Turn right to open the door
Turn left to close the door

- ⑥ To unscrew the lid and inject disinfectant (gel, alcohol, foam). Add to 3000ml.



- ⑦ Turn the key to the left and close the door of the disinfectant machine. Normal use



Installation details of hand sanitizer advertising machine


The first step

A columns are fixed by M10*15 (2) On the base of the cross



The second step

B column through M8*60 and M8*15 screws Lock the screw from left to right on pillar A By adjusting the spacing between the holes, the height of the base can be adjusted indirectly

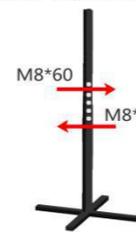

The third step


The 200*300 hanging plate is fixed on pillar B by M6*8 screws



Vertical type

The fourth step

Screw 4 M8*15 nuts on the back of the advertising machine to the position of 6MM. Then hang the machine from the top down on pillar B and change it by hand. Get off the machine and check if strong

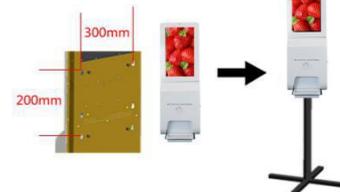

The fifth step

Turn the key to the right to open the machine door



The sixth step

Unscrew the disinfectant cap and add the disinfectant (gel, alcohol, foam) to 3000ml.



The seven step

Turn the key to the left and close the door of the disinfectant machine. Normal use

5. Remote Control



	Power Button, control switch, Short press stand-by, long press pop-up menu shutdown or restart
	Mute Button to control the sound switch
	Stop Button
	Play / Pause Button
	During playback, press this key to enter the next song
	During playback, press this key to enter the previous song
	Set Button, quickly open the settings interface
	Copy Button
	Volume Reduction
	Turn it up
	Move The cursor up
	Confirm Button
	Move the cursor to the left
	Move The cursor to the right
	Move The cursor down

	Back Button
	Home Button, quick jump to the home page
	Flying Mouse Button, pop-up mouse arrows, with up and down about button can be moved
	The number one button
	The number two button
	The number three button
	The number four button
	The number five button
	The number six button
	The number seven button
	The number eight button
	The number nine button
	Symbols. Push Button
	The number zero button
	Delete Button
	Menu Button

6.Maintenance and repair

1. During the installation and use of the products, all the electrical safety regulations of the state and the use area must be strictly observed.

2.Please read the instruction manual carefully before using the product again.

3. When the water level is below 10% , replenish the disinfectant as soon as possible within 7 days.

4.If the product is not working properly, please contact the after-sales service personnel, do not disassemble or modify the product in any way. We are not responsible for any problems caused by unauthorized modification or maintenance.

5. Do not immerse the product in water and do not install it in an outdoor environment.

6. The product shall not be used in an open flame environment.

7. Arrange to have your hand sanitizer tray cleaned on a regular basis.

8.Avoid extreme high temperature (or low temperature) , high humidity, vibration, radiation, chemical corrosion and other harsh or extreme environment.

7.Product Warranty Card

Dear customers, thank you for buying 21.5-inch hand sanitizer advertising machine, in order to better serve you, after the purchase of products, please read, fill in and take good care of this warranty card.

Customer name:	
Contact Person:	
Contact number:	
Customer Address:	
DATE OF PURCHASE:	
Factory Code:	
MAINTENANCE RECORDS:	
CAUSE OF FAILURE:	

Warranty:

- 1.Please keep this warranty card for maintenance certificate.
- 2.This product is guaranteed for 1 year from the date of purchase.
- 3.Warranty equipment in the warranty period, in the normal use and maintenance of the situation, the machine itself failure, verified, the company will provide free maintenance and replacement parts.
- 4.During the warranty period, the company has the right to refuse the service or to charge the material fee and maintenance service fee as appropriate.
 - 1) this warranty card and valid purchase certificate can not be provided.
 - 2) product failure and damage due to user misuse.
 - 3) abnormal external force damage.
 - 4) , not our division maintenance services, the user self-repair caused damage.
 - 5) 、 Failure or damage caused by natural disasters or other force majeure factors.
 - 6) 、 The others deliberately damaged it.
5. The company reserves the right to amend and interpret all the content.